



FRONT:

1. Hold Fender Flare firmly to machine and mark holes. *Hint: having another person holding Fender Flare in place will ease installation. See Fig. 1.*
2. Drill holes large enough for M6 Bolts.
Before installing, align cutout in back side of Fender Flare with body panel seam. See Fig. 1.

3. Install Fender Flare to machine with supplied M6 hardware. See Fig. 1.
4. Repeat steps for opposite side.

REAR:

1. Hold Fender Flare firmly to machine and mark holes. *Hint: having another person holding Fender Flare in place will ease installation. See Fig. 2.*
2. Drill holes large enough for M6 Bolts.
3. Install Fender Flare to machine with supplied M6 hardware. See Fig. 2.
4. Repeat steps for opposite side.

(installation illustrations on following page)

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

*Thank You
For Choosing*



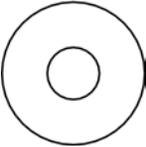
Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

- 32x  M6-1.0 x 20mm Lg. BHCS
- 64x  M6 Flat Washer
- 32x  M6-1.0 Nylock Nut

